




# Samsung DVD-HD850 Player Disk Tray Replacement

This guide shall assist you in fixing a jammed disk tray if you followed thoroughly the troubleshooting steps with no positive results.

Written By: Carlos

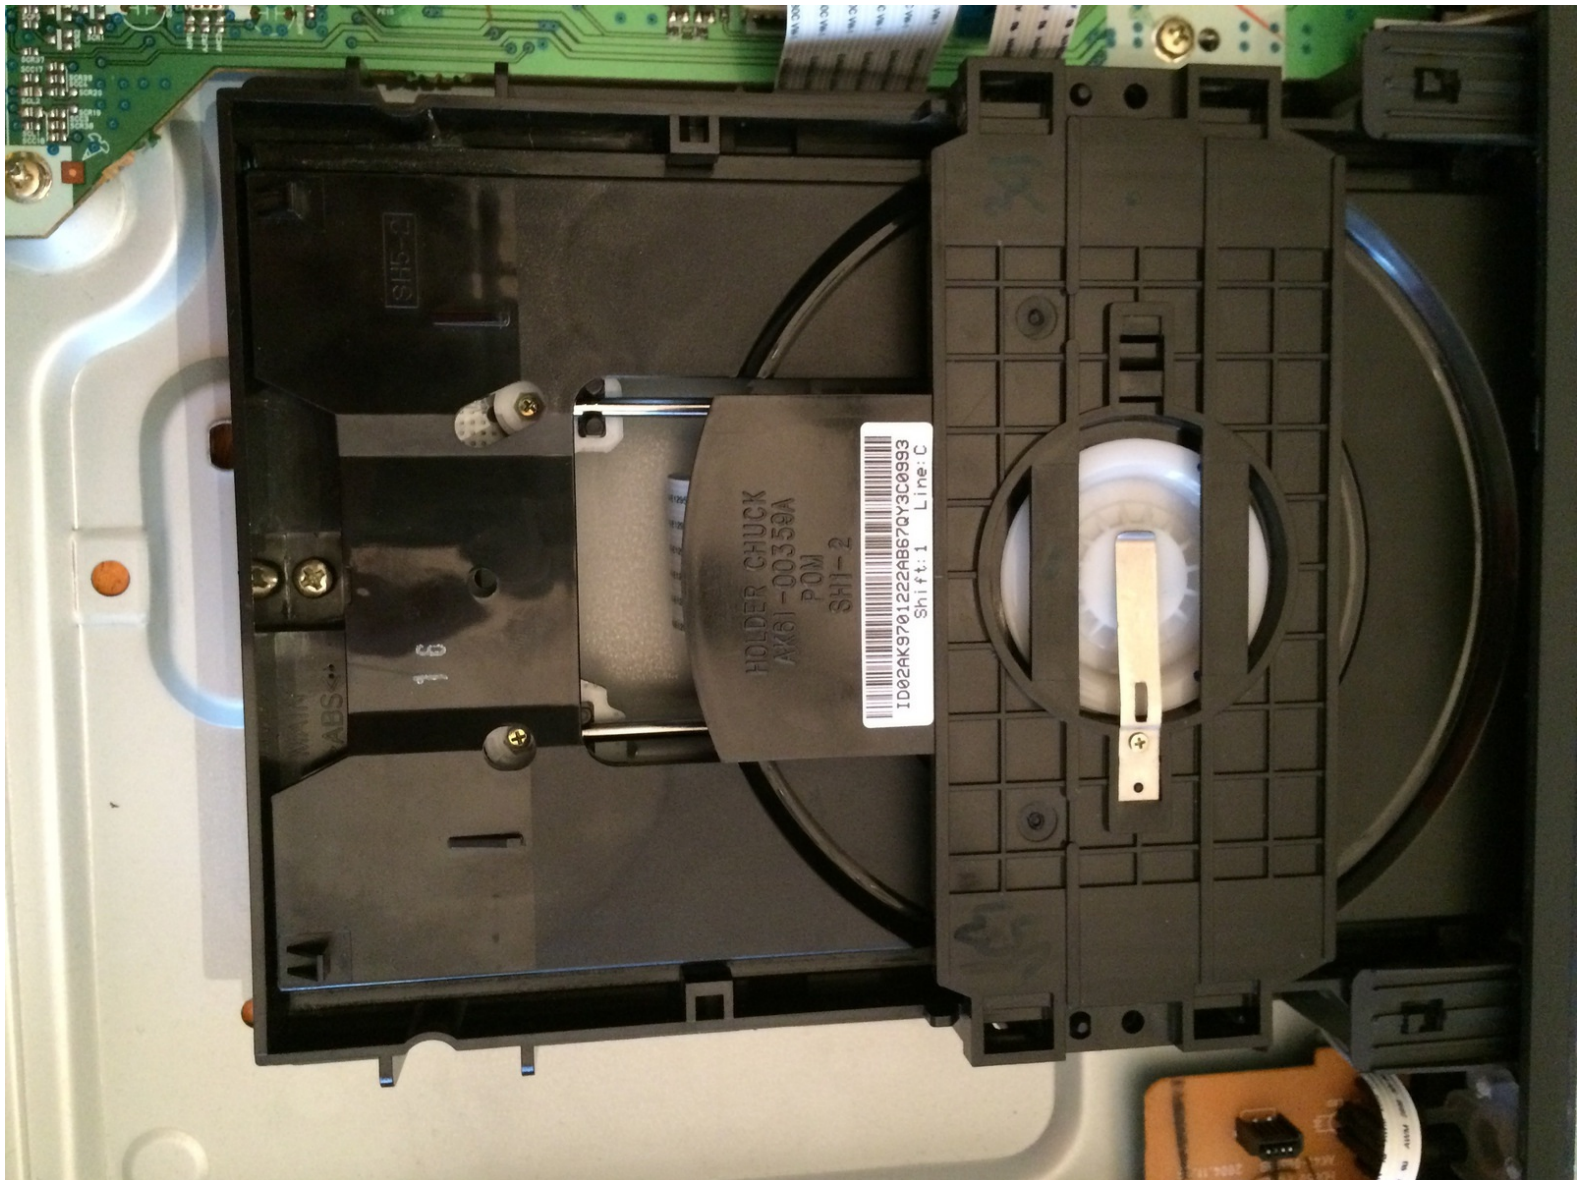

## INTRODUCTION

Caution: All alteration or modifications are the users responsibility, and not of the guide creator. These steps are only recommended if not under warranty or if a solution has not yet been found.

---

### TOOLS:

- [Magnetic Project Mat](#) (1)


*Or something similar, It is not neccesary but its recommened to organize/safe your screws and other objects of similar nature*


- [Phillips #1 Screwdriver](#) (1)

*Or some of similar nature*

---


## Step 1 — Locate and Remove The Disk Tray

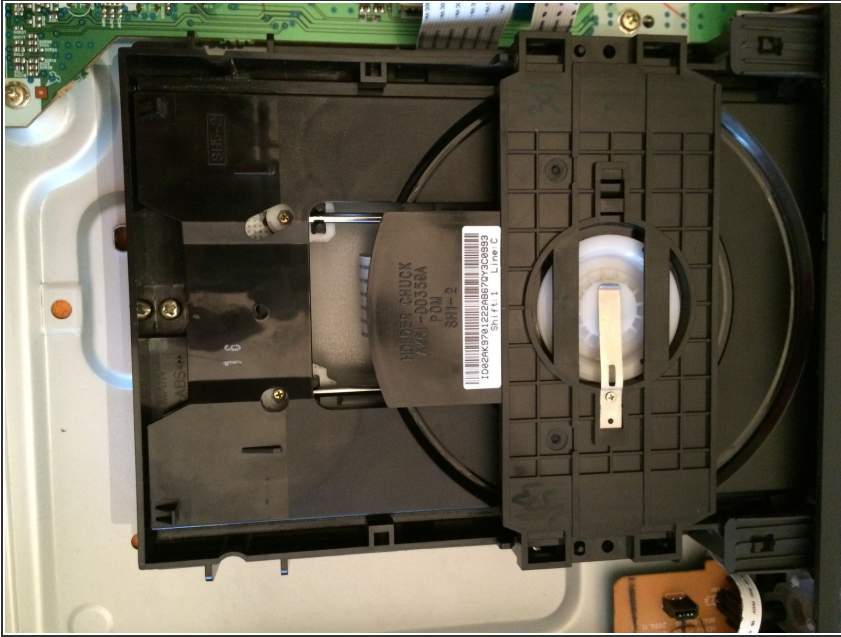

 **\*NOTE\*** remember to never connect to power when working on electrical components

- Find and locate the disk tray it is located top right hand side of the component when the back of the device ( dvd player ) is facing you.

## Step 2 — Removing The Data Strips

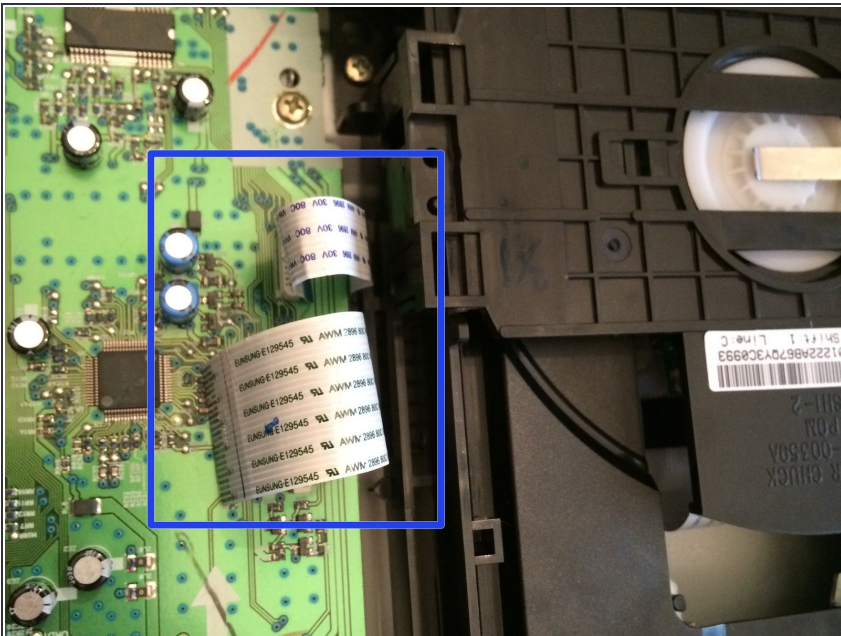

- Locate and gently remove the data strips on the tray. There are three in total, two on the left hand side and one on the right.



## Step 3 — Removing The Screws




- As noted by the red circles, locate and remove the screws one at a time

## Step 4 — Disk Tray Removal



- After removing the clips slowly incline the disk drive towards you and unclip it from the two (2) brackets located on the top
- ★ Be careful not to push too much pressure on the brackets since they tend to break easily

## Step 5 — Success!

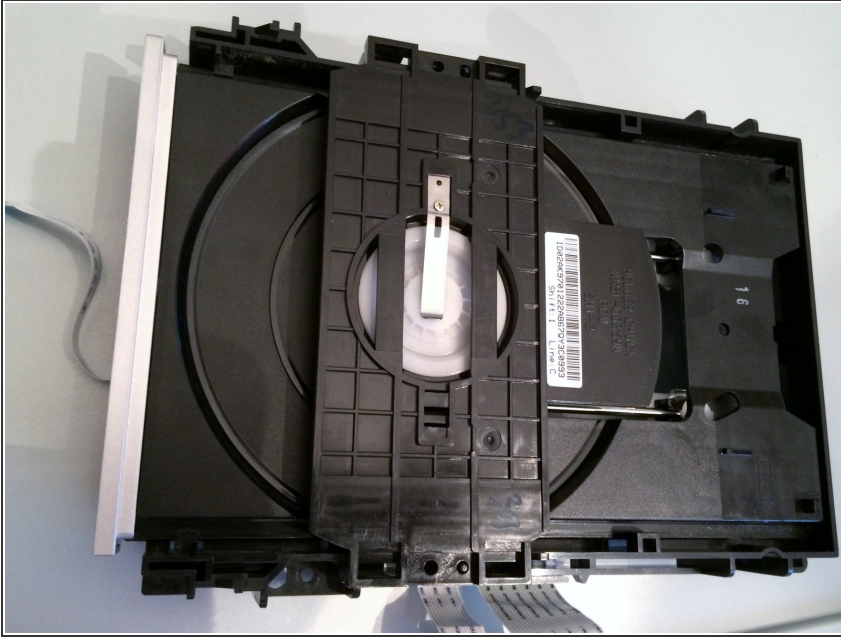

- Congrats! You have successfully taken out the disk drive

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-21 07:45:57 PM.